


SPICER 10 SPEED

TO UP SHIFT

- START WITH SELECTOR IN DOWN POSITION
- SHIFT 1 - 2 - 3 - 4 - 5 RAISE SELECTOR
- SHIFT 6 - 7 - 8 - 9 - 10

TO DOWN SHIFT

- SHIFT 10 - 9 - 8 - 7 - 6 DEPRESS SELECTOR
- SHIFT 5 - 4 - 3 - 2 - 1

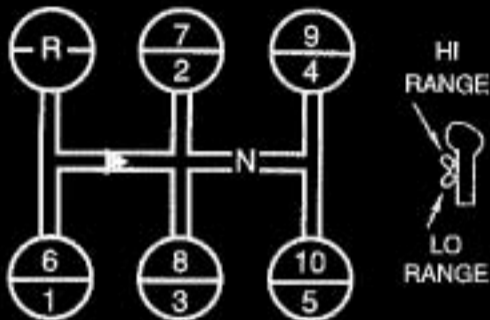

DO NOT CHANGE RANGE WHILE MOVING IN REVERSE

TECHNICAL SUPPORT LINE

(INCLUDING ALASKA & CANADA)

800 - 481 - 8806